

FEAST **W**ATSON®



HOW TO
*Coat a deck using
Traditional Timber Oil*

WEATHERED GREY

EXTERIOR TIMBER CARE

What you will need



MATERIALS

STEP 1

STEP 2

STEP 3

STEP 4



FEAST WATSON

Traditional Timber Oil WEATHERED GREY

- ✓ Natural timber look
- ✓ 2 hour recoat
- ✓ Penetrating timber oil

COVERAGE: 6m² per litre
WIPE OFF: 30 - 60 minutes
RECOAT TIME: 1 - 2 hours
NO OF COATS: 1 - 3
CLEAN UP: Mineral turpentine
PACK SIZE: 4L & 10L

FEAST WATSON

Woodclean™ EXTERIOR TIMBER CLEANER

- ✓ Use before all exterior coatings
- ✓ Restores natural colour
- ✓ Scrub in, Wash off

MIX RATIO: Dilute 1 part Woodclean to 4 parts water
COVERAGE: 20m² per Liter
READY TO COAT: When thoroughly dry
CLEAN UP: Water
PACK SIZE: 1L & 4L

STEP 5

STEP 6

STEP 7

Equipment you will need



Hose




Stiff bristle broom



Squeegee



Bucket

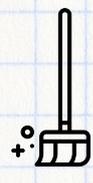


Applicator brush or pad



Clean old rags



Stirrer

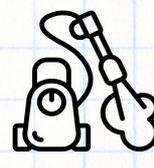

Pressure washer

STEP 7

JOB DONE!

Step 1

SWEEP DOWN THE DECK



Clear everything off your deck and give it a good sweep. You want to remove dust, dirt and leaves so you don't stain your timber.

MATERIALS



STEP 1

STEP 2

STEP 3

STEP 4

STEP 5

STEP 6

STEP 7

STEP 8

JOB DONE!

Step 2

HOSE DOWN YOUR TIMBER



MATERIALS



STEP 1



STEP 2

STEP 3

STEP 4

STEP 5

STEP 6

STEP 7

STEP 8

JOB DONE!



Ensure all timber is thoroughly wet before cleaning the deck. You can use your garden hose or a high-pressure hose.

Step 3

MIX FEAST WATSON WOODCLEAN

Dilute 1 part Feast Watson Woodclean into 4 parts water in a large bucket. Make sure everything is mixed in well.



MATERIALS

STEP 1

STEP 2

STEP 3

STEP 4

STEP 5

STEP 6

STEP 7

STEP 8

JOB DONE!

Step 4

SCRUB THE SOLUTION INTO THE TIMBER

Using a stiff bristled scrubbing broom, scrub the timber vigorously to remove dirt and contaminants. Leave the solution to penetrate for 20 minutes.



Note

Keep the surface damp/wet and do not let Woodclean dry on the timber.

Protect nearby plants, paint and other surfaces with plastic sheeting as Woodclean may cause erosion.



MATERIALS

STEP 1

STEP 2

STEP 3

STEP 4

STEP 5

STEP 6

STEP 7

STEP 8

JOB DONE!

Step 5

WASH OFF



Using a high-pressure hose or pressure washer, wash off the Woodclean solution. Allow the timber to dry completely before applying Traditional Timber Oil in Weathered Grey.

MATERIALS

STEP 1

STEP 2

STEP 3

STEP 4

STEP 5

STEP 6

STEP 7

STEP 8

JOB DONE!

Step 6

APPLY TRADITIONAL TIMBER OIL



Prepare Traditional Timber Oil in Weathered Grey by stirring well and pour into a bucket for easier application. Try to avoid introducing bubbles.

Apply Traditional Timber Oil in the direction of the grain, 3-4 planks at a time. If using a roller or spray, back brush the coating to ensure even penetration.

Make sure end grain and edges are full coated.

MATERIALS

STEP 1

STEP 2

STEP 3

STEP 4

STEP 5

STEP 6

STEP 7


STEP 8

JOB DONE!

Step 7

ALLOW TIME TO DRY

Allow to penetrate for 30-60 minutes, then wipe off excess product with dry applicator or clean cloth before the surface becomes tacky. Allow to dry for another 60 minutes

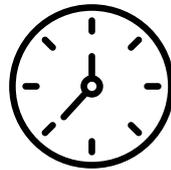

MATERIALS

STEP 1

STEP 2

STEP 3

STEP 4

STEP 5

STEP 6

STEP 7

STEP 8

JOB DONE!

Step 8

APPLYING TO BARE TIMBER

Apply a second coat, allowing the product to penetrate for 30-60 minutes. Wipe off the excess. Allow to dry for 18 hours before light foot traffic.



APPLYING A MAINTENANCE COAT.

If you are refreshing your already coated deck you can just stick with one coat. If you prefer a lighter colour you can apply a second coat.

MATERIALS

STEP 1

STEP 2

STEP 3

STEP 4

STEP 5

STEP 6

STEP 7

STEP 8

JOB DONE!

Job Done!

MAINTENANCE

Regularly monitor your timber for signs of colour loss, dryness and weathering. Recoat the timber when it begins to show signs of dryness to help maintain its natural beauty and protection.



ENJOY!

Now get out there and enjoy your beautiful new deck!



MATERIALS

.....

STEP 1

.....

STEP 2

.....

STEP 3

.....

STEP 4

.....

STEP 5

.....

STEP 6

.....

STEP 7

.....

STEP 7

.....

JOB DONE!